

Orchesternotenpult 12120

Gebrauchsanweisung


- Kompakt zusammenlegbar
- Einfache Handhabung
- Geringes Eigengewicht
- In der mitgelieferten Tasche leicht zu transportieren




Aufstellanleitung

Schritt 1: Notenpult aus der Tasche nehmen.


Schritt 2: Notenpultplatte vollständig auseinanderklappen.

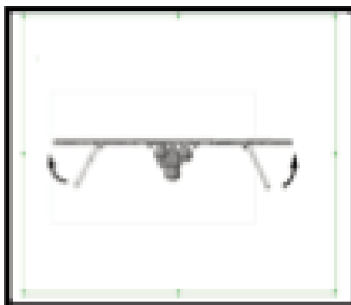

Schritt 3: Den Notenablagewinkel in den Schlitz am unteren Ende der Notenpultplatte schieben.

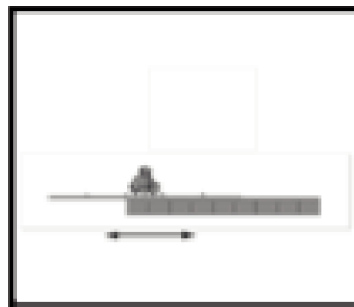

Schritt 4: Feststellschraube auf der Rückseite der Notenpultplatte lösen, das Pult in die gewünschte Position bringen und Schraube wieder festdrehen.

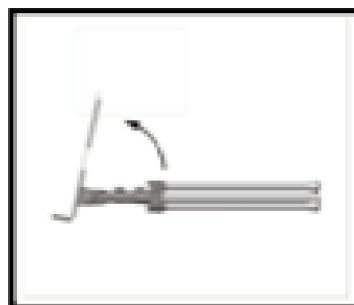


Schritt 5: FüÙe bis zum Anschlag aufklappen.

Achtung:


Beim Aufklappen Finger nicht zwischen FüÙe und Sockel bringen.



Schritt 6: Unteren Hebel oberhalb des Fußgelenks lösen und das Grundrohr bis zum Anschlag herausziehen. Hebel wieder feststellen.

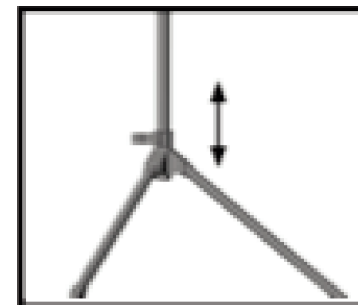


Schritt 7: Zur Einstellung der Höhe, Hebel an der Rohrkombination lösen und Auszugsrohr bis zur gewünschten Höhe herausziehen. Hebel dann wieder fest schließen.

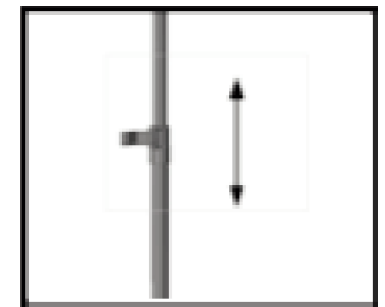

Schritt 8: Anschließend Notenpultplatte in gewünschtem Winkel positionieren.

Achtung:

Die Höhe nur bei gelösten Hebeln verstellen!

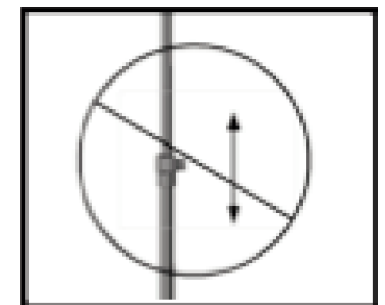

Der Zusammenbau erfolgt in umgekehrter Reihenfolge der Aufstellanleitung.

Orchestra Music Stand 12120

User's Guide

- Compact folded size
- Easy to set up
- Light weight
- Easy to carry with the included carrying case




Set Up

STEP 1: Take the stand out from the carrying case.

STEP 2: Unfold the music desk completely.




STEP 3: Slide the connecting piece into the slot on the bottom of the music desk.

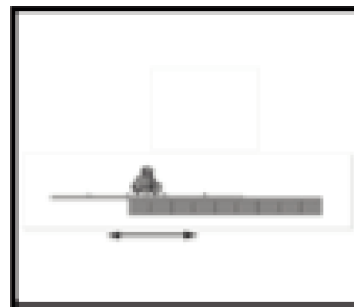


STEP 5: Open the legs until they snap into position.

Caution:

Do not put your fingers between legs and leg fitting.

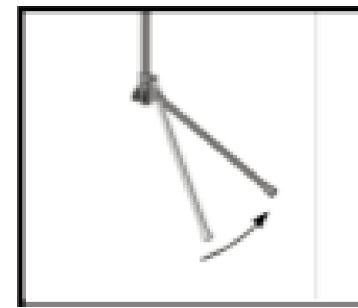

STEP 7: Adjust the height by loosening the lever on the rod combination and telescoping the tube until it reaches your desired height.

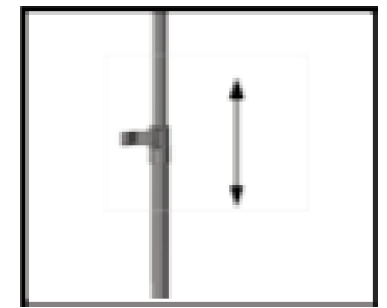





STEP 4: Loosen the knob on the backside of the music desk and adjust it at your desired angle.

STEP 6: Loosen the lever on the base and push the leg section all the way down to the bottom of the main tube.

STEP 8: Finally adjust the angle of the music desk.

Caution:

Do not adjust the height when lever is in closed position!

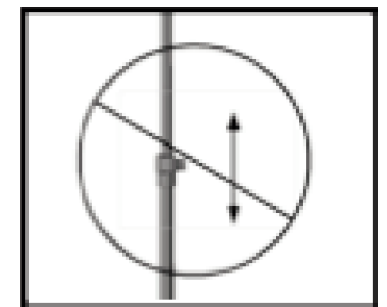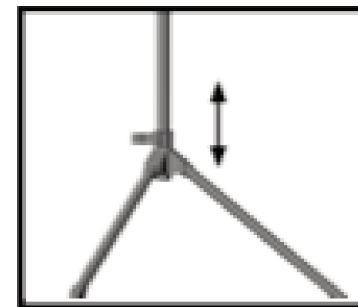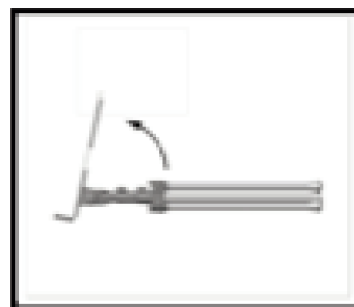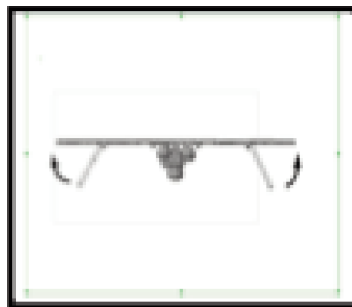

Collapse the stand in the reverse order.