



# 12247 Notenpultleuchte

## » T-Model LED FlexLight «

### 1. Ausstattung & Abmessungen

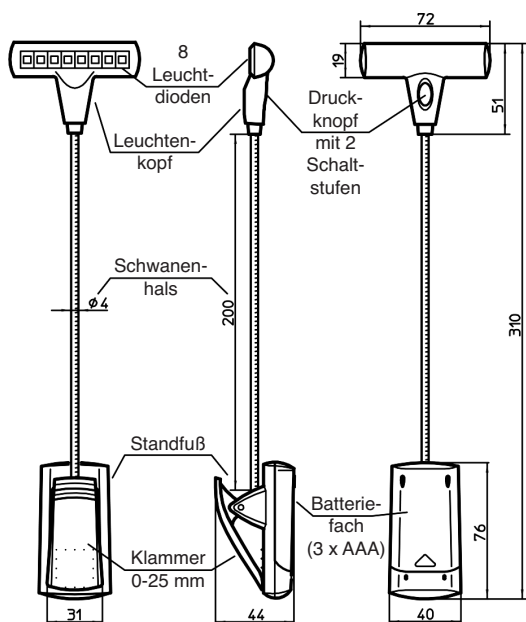


### 2. Batterien/Akkus einsetzen oder wechseln

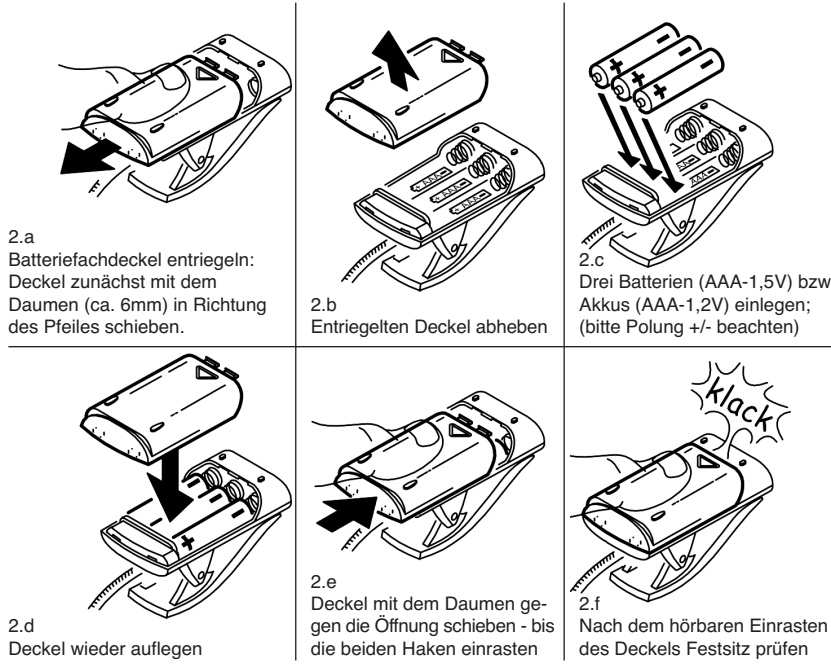

### 3. Lampe platzieren


#### 3.a an PLATTEN

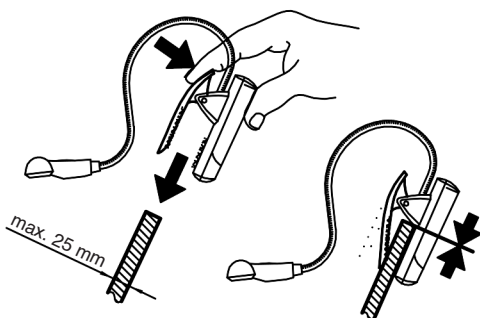

3.a.1 Klammer drücken und über die Notenpult- oder sonstige Platte (max.25mm) schieben...

3.a.2 ...bis die Platte am unteren Anschlag der Klammer innen anstößt


#### 3.b an K&M-NOTENKÖPFEN

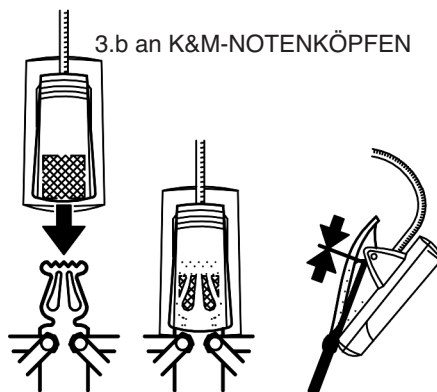

3.b.1 Klammer drücken und über die mittige platzierte Lyra des Notenkopfes schieben...

3.b.2 ...bis die Platte am oberen Anschlag innen anstößt

#### 3.c auf TISCHEN und ABLAGEN

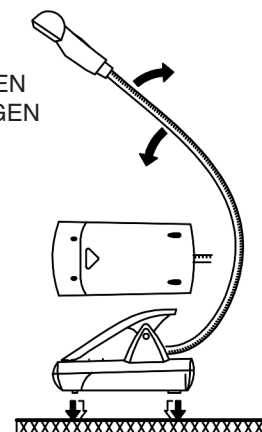

3.c.1 Lampenfuß auf eine ebene Unterlage stellen. Vier Auflagepunkte sorgen für einen wackelfreien Stand


3.c.2 Für die optimale Balance ggf. den Schwanenhals mitsamt Leuchtkopf etwas korrigieren

### 4. Licht Ein- und Ausschalten



Durch mehrfaches Betätigen des Druckknopfes wird die Lichtstärke gesteuert:

Grundstellung = Licht AUS

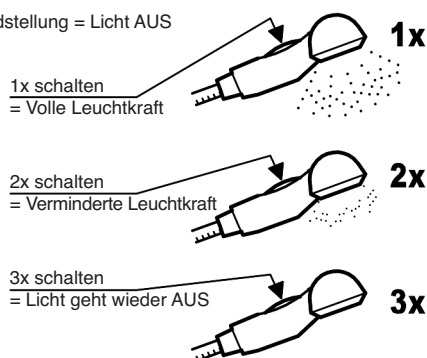


1x schalten = Volle Leuchtkraft

2x schalten = Verminderte Leuchtkraft

3x schalten = Licht geht wieder AUS

Schaltzyklus beginnt erneut

### 5. Leuchtenkopf einstellen

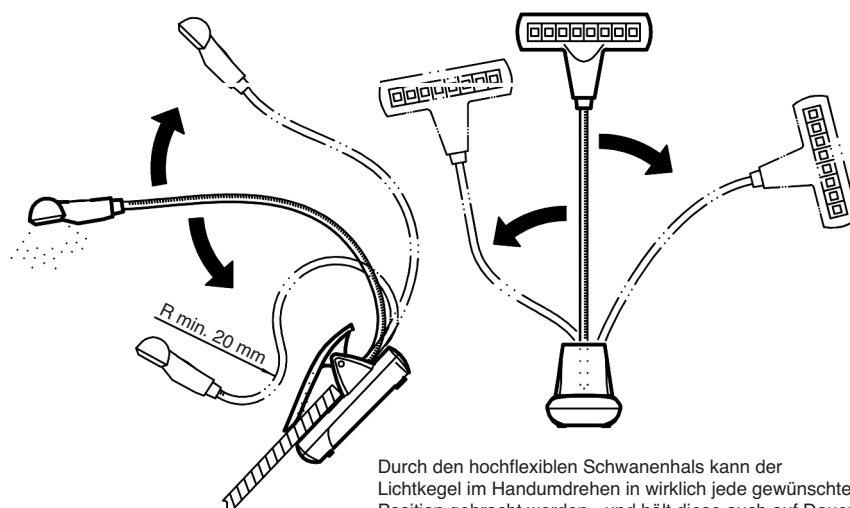


Durch den hochflexiblen Schwanenhals kann der Lichtkegel im Handumdrehen in wirklich jede gewünschte Position gebracht werden - und hält diese auch auf Dauer.


# 12247 Music stand light

## » T-Model LED FlexLight «

### 1. Equipment & Dimensions

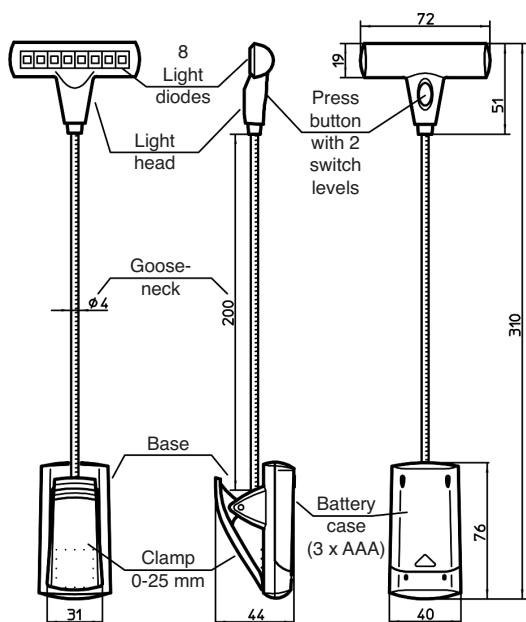


### 2. Batteries/rechargeable batteries insert or change

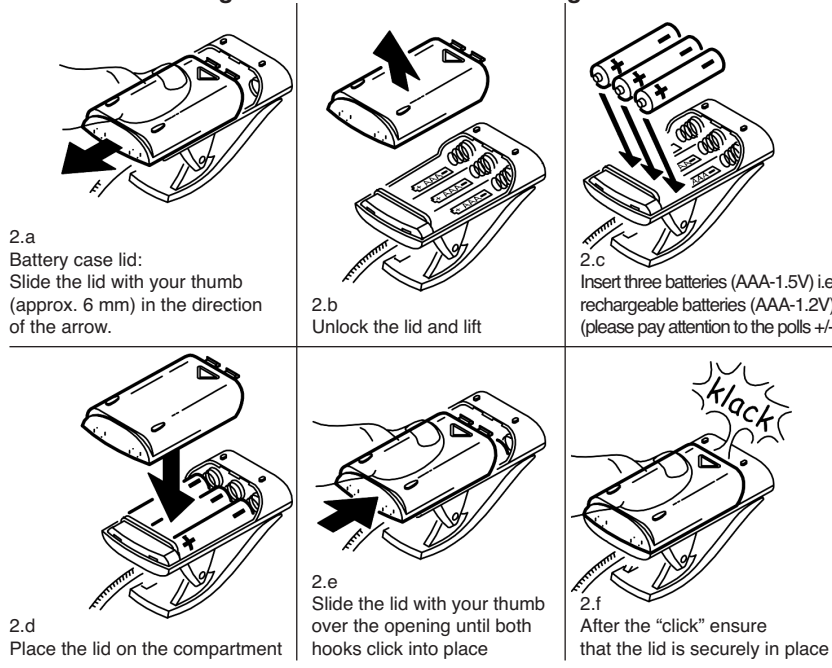


### 3. Placement of the lamp

#### 3.a to the PLATES

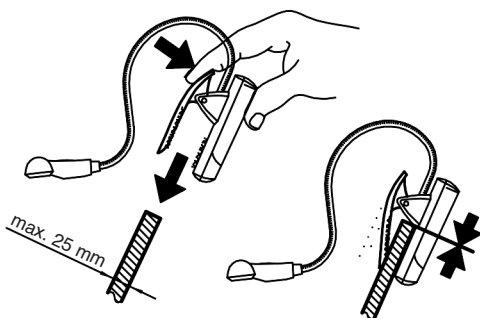


- 3.a.1 Press the clamp and slide the music desk or other plate (max. 25 mm)...
- 3.a.2 ...until the plate reaches the inside of the lower end of the clamp

#### 3.b to K&M-NOTE HEADS

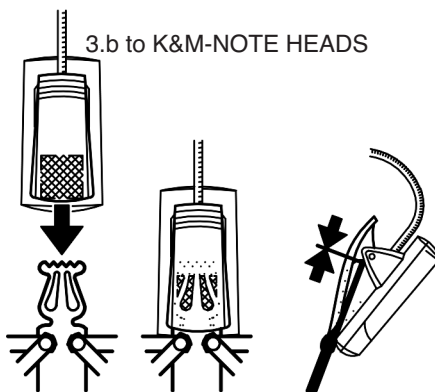


- 3.b.1 Press the clamp and slide the Lyra placed in the middle of the note head...
- 3.b.2 ...until the plate reaches the inside of the upper end of the clamp

#### 3.c on TABLES and TRAYS

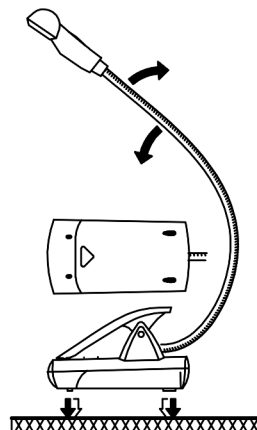

- 3.c.1 Place the lamp foot /base on a level surface. Four points of support ensure stability
- 3.c.2 To attain optimal balance adjust the gooseneck and the light head a bit

### 4. Turn Light On/Off

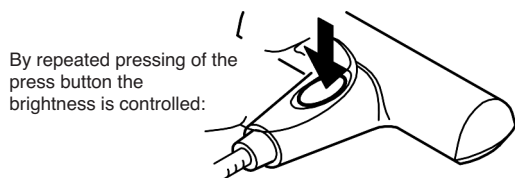


Initial position = Light OFF

- Press 1x = full brightness
- Press 2x = less brightness
- Press 3x = Light is turned OFF

The switching cycle begins again

### 5. Adjust the Light Head

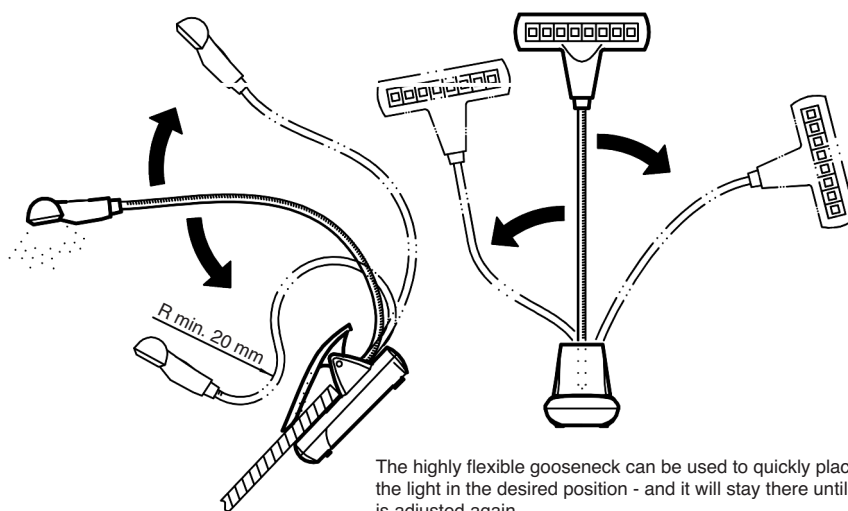

The highly flexible gooseneck can be used to quickly place the light in the desired position - and it will stay there until it is adjusted again.