

# 24652 Stellfuß-Set für Sockelplatten

## BESTIMMUNGSGEMÄSSER GEBRAUCH

Nie mehr kippelnde Sockelplatten. Die beiden Stellfüße ersetzen bei Bedarf an diversen Sockelplatten (Übersicht, Kapitel 5) die vorhandenen Standfüße. Ihre stufenlose Höhenverstellung ermöglicht den Ausgleich unebener Böden.

## MERKMALE & FÄHIGKEITEN

- Bedienung/Höhenverstellung erfolgt von Hand ohne Werkzeuggebrauch
- Einmal montiert, können die Stellfüße nicht verloren gehen
- Verstellbereich: 0-3,5 mm
- Abmessungen:  $\varnothing$  33,5 x 14/17,5 mm

Vielen Dank, dass Sie sich für dieses Produkt entschieden haben. Bitte lesen und beachten Sie vor Aufbau und Betrieb dieses Produkts sorgfältig diese Anleitung. Sie informiert Sie über alle wichtigen Schritte, um eine sichere Handhabung zu gewährleisten. Wir empfehlen, sie auch für den späteren Gebrauch aufzubewahren.

## SICHERHEITSHINWEISE

- Beachten Sie die Sicherheitshinweise der Stative, an denen diese Stellfüße zum Einsatz kommen. Insbesondere gilt:
- Auf geeigneten, d.h. ebenen und tragfähigen Untergrund achten.
- **WARNUNG!** Die Sockelplatte ist sehr schwer und stellt bei unsachgemäßer Handhabung eine Gefährdung für Personen und Sachen dar. Vor allem bei der Montage der Stellfüße, aber auch bei deren späteren Bedienung ist Vorsicht geboten. Die Sockelplatte darf unter keinen Umständen fallen gelassen werden. Es besteht Quetschgefahr an Fingern und Fußzehen.

## AUFSTELLANLEITUNG

### 1. BESTANDTEILE

Bitte Sichtprüfung vornehmen, ob alle Teile vollständig - und soweit erkennbar - in Ordnung sind. Beschädigte Teile dürfen nicht verwendet werden. Sie sind zu ersetzen. Lieferumfang zwei Paar:

- a Sicherungsmutter M5,
- b U-Scheibe  $\varnothing$  5,3/15 mm
- c Fußbasis (innen)  $\varnothing$  33,5 x 14 mm,
- d Verstellring (außen)  $\varnothing$  24 x 13,5 mm

### 2. VORBEREITUNG

- Unterschätzen Sie nicht das Gewicht der Sockelplatte.
- Beachten Sie die Sicherheitshinweise des Sockels und des Stativs.
- Bevor der Umbau stattfindet, ist die Traglast vom Stativ zu entnehmen.
- Ebenso sind die beweglichen Teile des Stativs, wie z.B. Teleskoprohre, zu fixieren oder zu entfernen.
- Zum Schutz des Untergrundes empfehlen wir eine Unterlage auszubreiten.
- **HINWEIS:** Im Lieferumfang befinden sich 2 Stellfüße, was für viele Anwendungen ausreichend ist. In manchen Fällen ist es hilfreich alle vier Standfüße gegen die Stellfüße 24652 auszutauschen.

2.1 Benötigte Werkzeuge: Steckschlüssel SW8 für Sicherungsmutter M5 a

### 3. MONTAGE der STELLFÜSSE

- 3.1 Stativ vorsichtig umlegen, so dass die Standfüße zugänglich sind: Stativ muss gegen unerwünschte Bewegungen (Rollern, Kippen) gesichert sein.
- 3.2 Mittels Steckschlüssel SW8 wird die Schraubverbindung gelöst.
- 3.3 Die von oben eingesteckte Schloßschraube verbleibt im Sockel, während die Teile unterhalb der Sockelplatte (Gummifuß, Sicherungsmutter, U-Scheibe) entfernt und...
- 3.4 ...ersetzt werden durch den Stellfuß c, d, der mit der glatten Seite voran über das Gewinde der Schloßschraube geschoben wird.
- 3.5 Anschließend werden die neue U-Scheibe b eingelegt und die ebenfalls neue Sicherungsmutter M5 a von Hand soweit wie möglich aufgedreht.
- 3.6 Die Sicherungsmutter ist dann mit dem Steckschlüssel fest anzuziehen.

### 4. HÖHE der STELLFÜSSE JUSTIEREN


- 4.1 Nach der Montage der Stellfüße wird das Stativ wieder aufgestellt. Einer evtl. kippelnden Bodenplatte ist durch Justierung eines oder auch mehrerer Stellfüße zu begegnen.
- 4.2 Das geschieht durch händisches Verdrehen des geriffelten Verstellrings d. **HINWEIS:** Das dazu nötige Anheben der Sockelplatte stellt eine Gefährdung dar (Einklemmen der Finger) und erfordert Sorgfalt und Vorsicht. Wir empfehlen mit zwei Personen zu arbeiten. Eine für den Stellfuß - eine hält das Stativ.
- 4.3 Der maximale Verstellbereich beträgt stufenlose 3,5 mm.

## FEHLERSUCHE (F) und BESEITIGUNG (B)

- F: Sockelplatte kippt auf dem Boden
- B: Stellfuß nachjustieren
- B: Unebenheiten des Bodens sind größer als der Verstellbereich
- B: Stellfüße locker - nachziehen mit Steckschlüssel (SW8 = M5)
- B: Geradheit der Sockelplatte prüfen

## TECHNISCHE DATEN


|             |                                                                                          |
|-------------|------------------------------------------------------------------------------------------|
| Material    | Stellfuß (Innen- und Außenring): PA-6, 30% GF, schwarz<br>Verschraubung: Stahl, verzinkt |
| Abmessungen | Außen $\varnothing$ 33,5 mm, Höhe: 14 + 3,5 mm Verstellweg                               |
| Gewicht     | 0,026 kg                                                                                 |

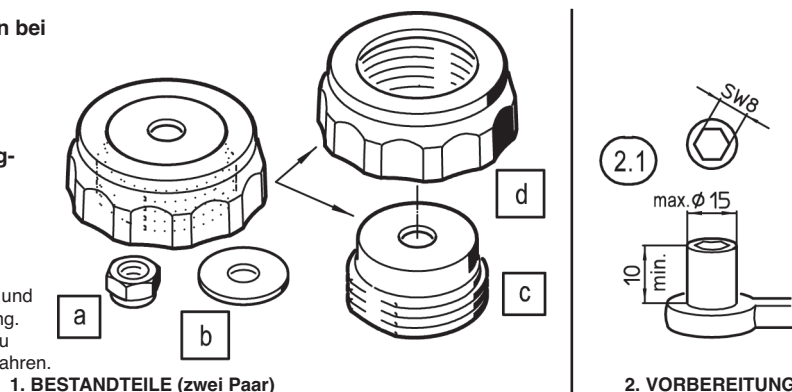


1. BESTANDTEILE (zwei Paar)

2. VORBEREITUNG

### 3. MONTAGE der STELLFÜSSE

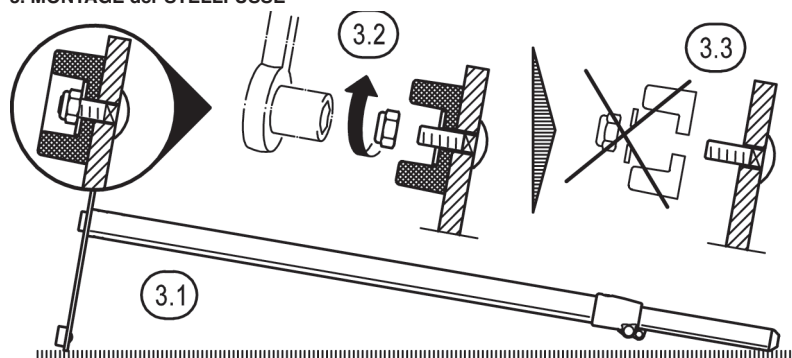

### 4. HÖHE der STELLFÜSSE JUSTIEREN

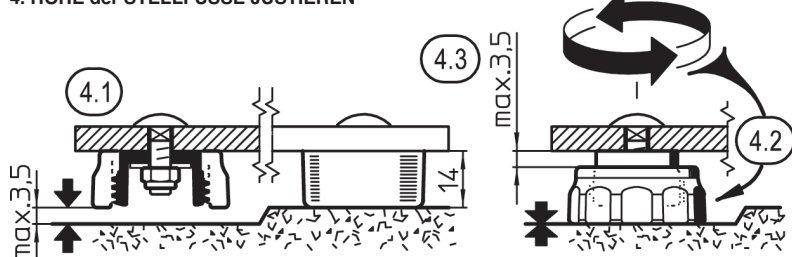

## 5. BETROFFENE SOCKELPLATTEN und STATIVE

An diesen K&M-Produkten können die Stellfüße eingesetzt werden:

### SOCKELPLATTEN:

- 26707 Sockelplatte S (406 x 406, 3 x M20)
- 26711 Sockelplatte S (406 x 406)
- 26712 Sockelplatte M (489 x 489)
- 26713 Sockelplatte M (489 x 489, 3 x M20)
- 26715 Sockelplatte L (550 x 550)
- 26716 Sockelplatte L (550 x 550, 3 x M20)

### Frühere Modelle:

- 26703 Sockelplatte (410 x 410)
- 26704 Sockelplatte (480 x 480)
- 26705 Sockelplatte (550 x 550)
- 26706 Sockelplatte (550 x 550, 3 x M20)

### STATIVE:

- 24650 Leuchten-/Boxenstativ
- 24651 Leuchten-/Boxenstativ »Pro«
- 24653 Leuchten-/Boxenstativ
- 26454 Leuchten-/Boxenstativ »Pro«
- 26727 Boxenstativ »Pro«
- 26729 Boxenstativ
- 26731 Boxenstativ
- 26732 Boxenstativ
- 26733 Boxenstativ »Easy Lock«
- 26782 Bildschirmstativ

# 24652 Leveling feet set for base plates

## INTENDED USE

No more wobbly base plates. If necessary, the two leveling feet can replace the existing feet on various base plates (overview, Chapter 5). Their continuous height adjustment allows uneven floors to be leveled.

## FEATURES AND CAPABILITIES

- Operation and height adjustment are manual and require no tools.
- Once installed, the adjustable feet cannot come loose or be misplaced.
- Adjustment range: 0-3.5 mm
- Dimensions: diameter 33.5 x 14/17.5 mm

Thank you for choosing this product. Please carefully read and observe these instructions before setting up and operating this product. They guide you through all the important steps to ensure safe handling. We recommend that you also keep them for future use.

## SAFETY INSTRUCTIONS

- Observe the safety instructions for the stands on which these leveling feet are used. In particular, the following applies:
- Ensure that the surface is level and load-bearing.
- WARNING The base plate is very heavy and poses a risk to people and property if improperly handled. Particular care must be taken when installing the adjustable feet and operating them later on. Take care not to drop the base plate. There is a risk of crushing fingers and toes.

## SET-UP INSTRUCTIONS

### 1. COMPONENTS

Please carry out a visual inspection in order to ensure that all parts are complete and, as far as recognizable, in good order. Do not use damaged parts. They must be replaced. Included in delivery two pairs:

- a Locking nut M5,
- b Washer diameter 5,3/15 mm
- c Inner base element diameter 33.5 x 14 mm,
- d Adjustment ring (outer) diameter  $\varnothing 24 \times 13.5$  mm

### 2. PREPARATION

- Do not underestimate the weight of the base plate.
- Observe the safety instructions for the base and the stand.
- Before making any modifications, remove the load from the stand.
- Likewise, the moving parts of the stand (e.g. telescopic tubes) must be secured or removed.
- To protect the surface underneath, we recommend laying down a protective sheet.
- NOTE: Two adjustable feet are included; this is sufficient for many applications. In some cases, it is helpful to replace all four feet with the 24652 adjustable feet.

2.1 Tools required: SW8 socket wrench for M5 locking nut a

### 3. INSTALLATION of the LEVELING FEET

- 3.1 Carefully lay the stand on its side so that the feet are accessible: The stand must be secured against unintended movement (rolling or tipping).
- 3.2 Loosen the screw connection using an 8 mm socket wrench.
- 3.3 The carriage bolt inserted from above remains in the base while the parts below the base plate (rubber foot, lock nut, washer) are removed and...
- 3.4 ...replaced by the adjustable foot (c + d), which is pushed over the thread of the carriage bolt with the smooth side facing forward.
- 3.5 Then insert the new washer b, and tighten the new M5 locking nut a by hand as far as possible.
- 3.6 Then tighten the lock nut securely with the socket wrench.

### 4. ADJUST the HEIGHT of the LEVELING FEET


- 4.1 After installing the leveling feet, the stand is set up again. Any wobbling of the base plate can be counteracted by adjusting one or more of the adjustable feet.
- 4.2 This is done by manually turning the knurled adjustment ring d.  
NOTE: Lifting the base plate, which is necessary for this, poses a hazard (fingers can get caught) and requires care and caution. We recommend working with two people. One person works on the adjustable foot while the other holds the stand.
- 4.3 The maximum adjustment range is 3.5 mm and is continuously variable.

## FAULT-FINDING (F) and REPAIR (R)



- F: Base plate wobbles on the floor
- B: Readjust the leveling foot
- B: Floor irregularities exceed the adjustment range
- B: Leveling feet loose - tighten with socket wrench (SW8 = M5)
- B: Check the straightness of the base plate

## TECHNICAL DATA


|            |                                                                                                  |
|------------|--------------------------------------------------------------------------------------------------|
| Material   | Leveling foot (inner and outer ring): PA-6, 30% GF, black<br>Screw connection: steel, galvanized |
| Dimensions | Dimensions: external diameter 33.5 mm<br>height: 14 + 3.5 mm adjustment range                    |
| Weight     | 0.026 kg                                                                                         |

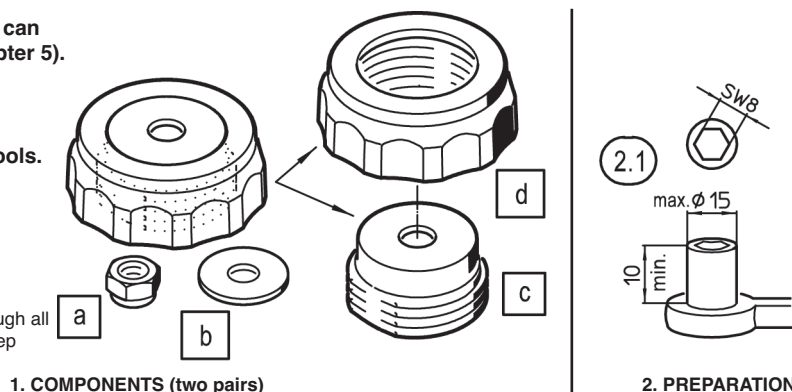

### 3. INSTALLATION of the LEVELING FEET

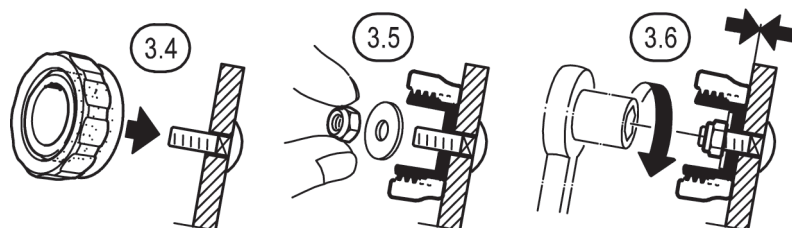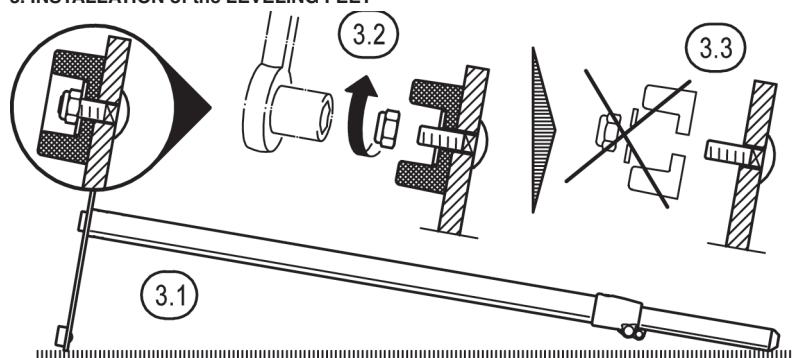

### 4. ADJUST the HEIGHT of the LEVELING FEET

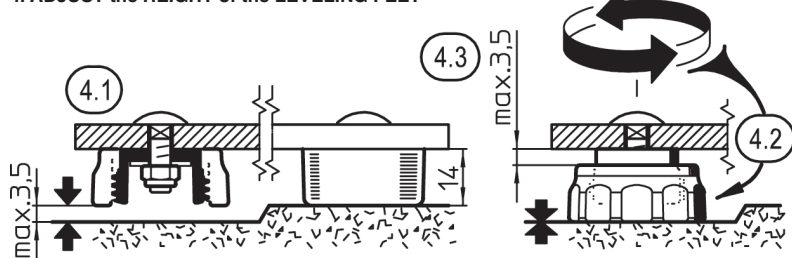

### 5. APPLICABLE BASE PLATES and STANDS

The leveling feet are compatible with the following K&M products:

#### BASE PLATE:

- 26707 Base plate S (406 x 406, 3 x M20)
- 26711 Base plate S (406 x 406)
- 26712 Base plate M (489 x 489)
- 26713 Base plate M (489 x 489, 3 x M20)
- 26715 Base plate L (550 x 550)
- 26716 Base plate L (550 x 550, 3 x M20)

#### Previous models:

- 26703 Base plate (410 x 410)
- 26704 Base plate (480 x 480)
- 26705 Base plate (550 x 550)
- 26706 Base plate (550 x 550, 3 x M20)

#### STANDS:

- 24650 Lighting/Speaker stand
- 24651 Lighting/Speaker stand »Pro«
- 24653 Lighting/Speaker stand
- 26454 Lighting/Speaker stand »Pro«
- 26727 Speaker stand »Pro«
- 26729 Speaker stand
- 26731 Speaker stand
- 26732 Speaker stand
- 26733 Speaker stand »Easy Lock«
- 26782 Screen/Monitor stand